

# HUVCO Bath Exhaust Fan and Tubular Skylight Combination

## Installation Instructions

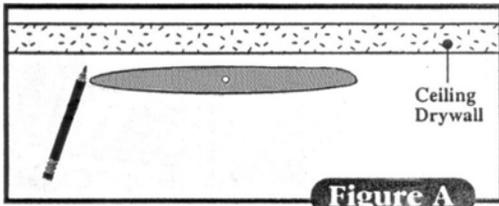


Figure A

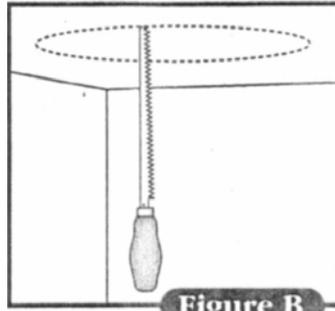


Figure B

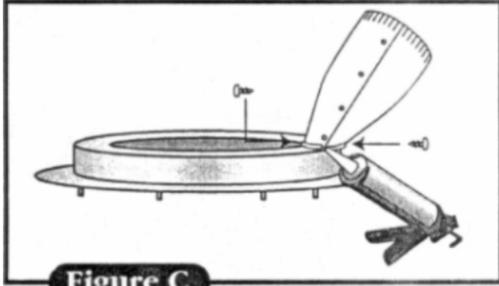


Figure C

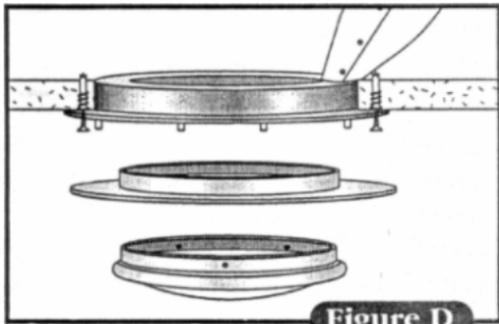


Figure D

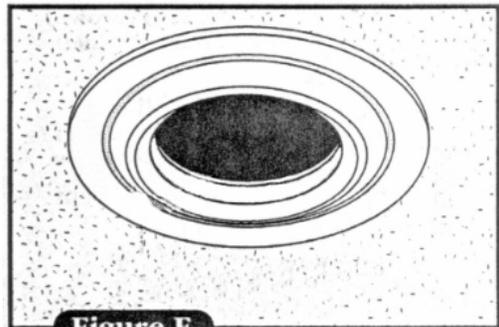


Figure E

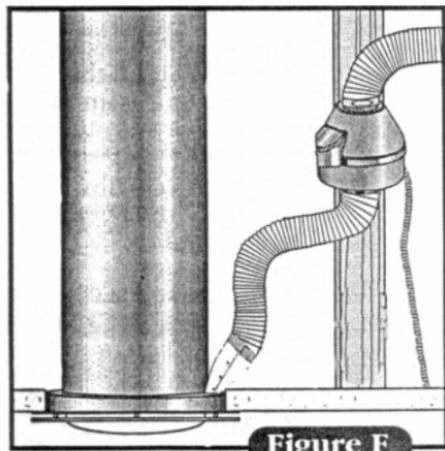


Figure F

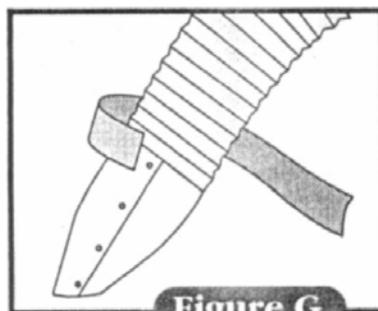


Figure G

1. Locate the desired placement for the ceiling diffuser to achieve the most light in the room making sure that there are no obstructions in the attic or on the roof between the ceiling diffuser and roof flashing. Locate the center of the ceiling trusses or framing.

2. Place the supplied cardboard template (for the cowl vent) to the ceiling and trace with a pencil. (Figure A).

3. Cut out the traced area with a drywall saw and remove. (Figure B).

4. Mark the (4) holes for the mounting of the cowl vent (Exhaust).

5. Install the round exhaust tube onto the cowl vent (exhaust) by flexing the round shape into an oblong shape. Fasten with (2) #8 x .5" tex screws and follow up with caulking all around the seam. (Figure C).

6. Install the (4) plastic EZ anchors into the drywall. Install the completed cowl vent (Exhaust) into the ceiling directing the exhaust tube towards the fan motor. Install the decorative ring into the cowl vent (exhaust) and fasten with (4) #8 x .5" tex screws. (Figure D).

7. Place the trim ring up into the hole on the cowl decorative ring and secure with (3) #8 x .5" tex screws supplied. Take the diffuser decorative ring, insert the diffuser into the decorative ring, push the pins on the decorative ring into the key way on the trim ring and turn to the right until it stops. (Figure E).

8. Install the sweep gasket on the inside of the trim ring approximately 1/4" above the bottom of the trim ring.

9. Install the fan motor in a suitable location as far away from the ceiling assembly as possible (approximately 3 to 4 feet). This will enable the Bath-Vent to operate at a lower noise level inside the house. Wire the fan motor according to your local or national electrical codes – see complete instructions inside the motor box.

10. Install the 4" flex ducting from the Bath-Vent to the fan motor (see Figure F) using 4" clamps on the motor and the supplied tape on the round exhaust tube. Tape as shown in Figure G.

11. Install the 4" ducting from the fan motor output to an existing roof vent.

12. Complete the installation of the tubular skylight as shown in the installation instructions. (Note the Bath-vent may be left on during the day to help keep your home more comfortable).

QUESTIONS?  
CONTACT HUVCO  
800-832-6116  
WWW.HUVCO.COM

 **HUVCO**  
The Best and the Brightest since 1996